 
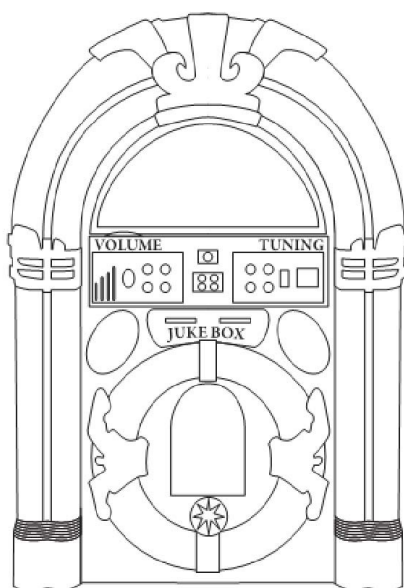 


OPERATING INSTRUCTIONS JUKE BOX MEMPHIS, KANSAS AND NEW ORLEANS

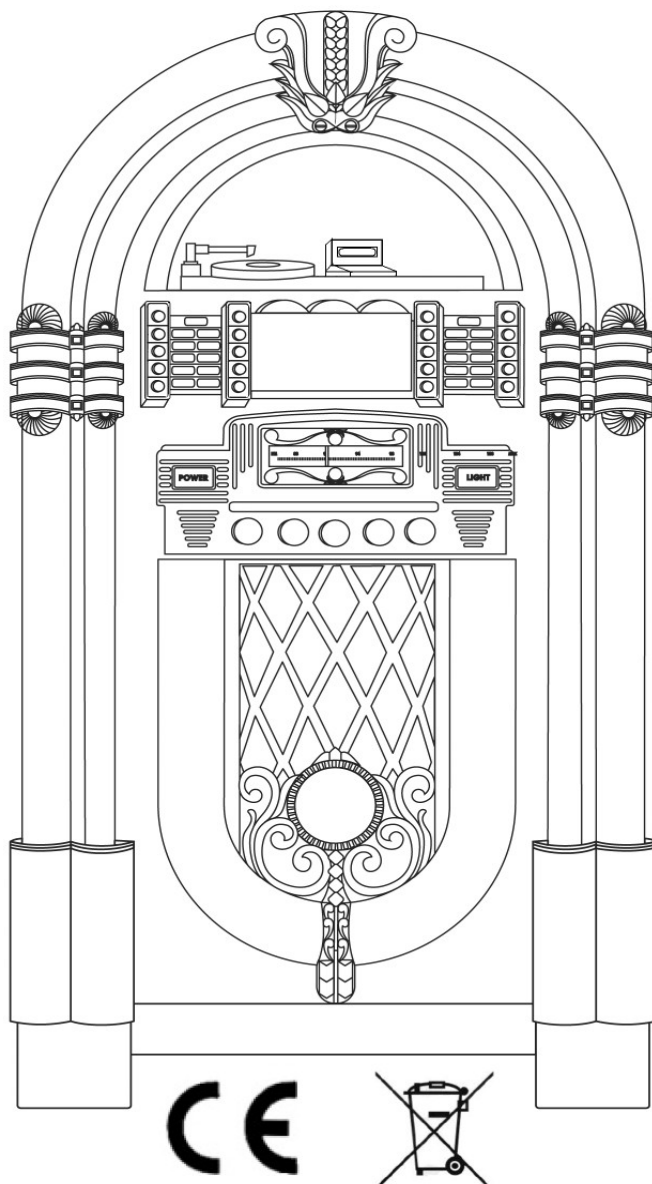

 
IMPORTANT SAFETY INSTRUCTIONS

Please read this owner's guide

Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features. Please save this owner's guide for future reference.

WARNING:

To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture. Liquids can cause a failure and/or a fire hazard. **DO NOT OPEN THE BACK PANEL FOR RISK OF ELECTRICAL SHOCK**

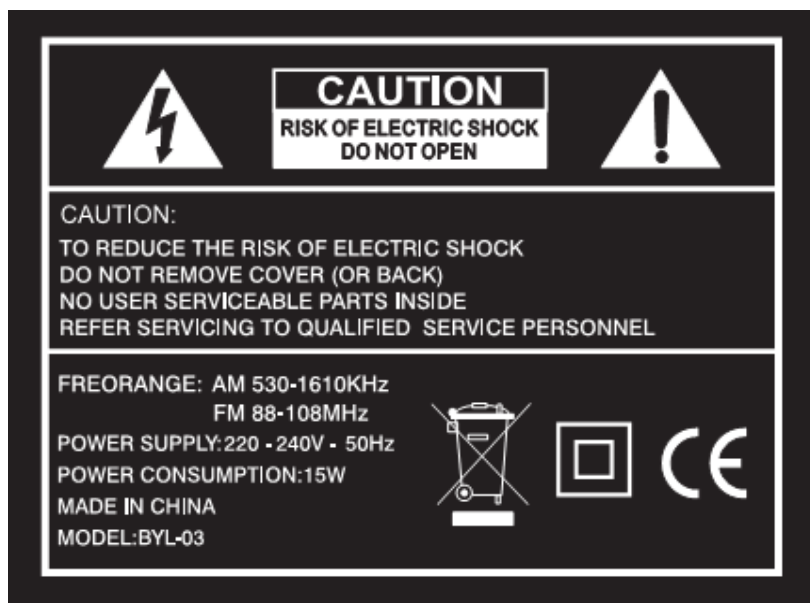

This symbol indicates that there are important operating instructions in the literature accompanying this unit. This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit. To reduce the risk of fire or electrical shock, do not expose this product to rain or moisture.

This product is intended to be used only with the power supply provided.

 
This product must be used indoors. It is NOT designed for outdoors use.

WARNING:

Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Dispose of used batteries promptly.

Please dispose of used batteries properly, following any local regulations.


FRONT PANEL FUNCTIONS + REMOTE CONTROL FUNCTIONS FOR MODEL MEMPHIS WITH I-POD:

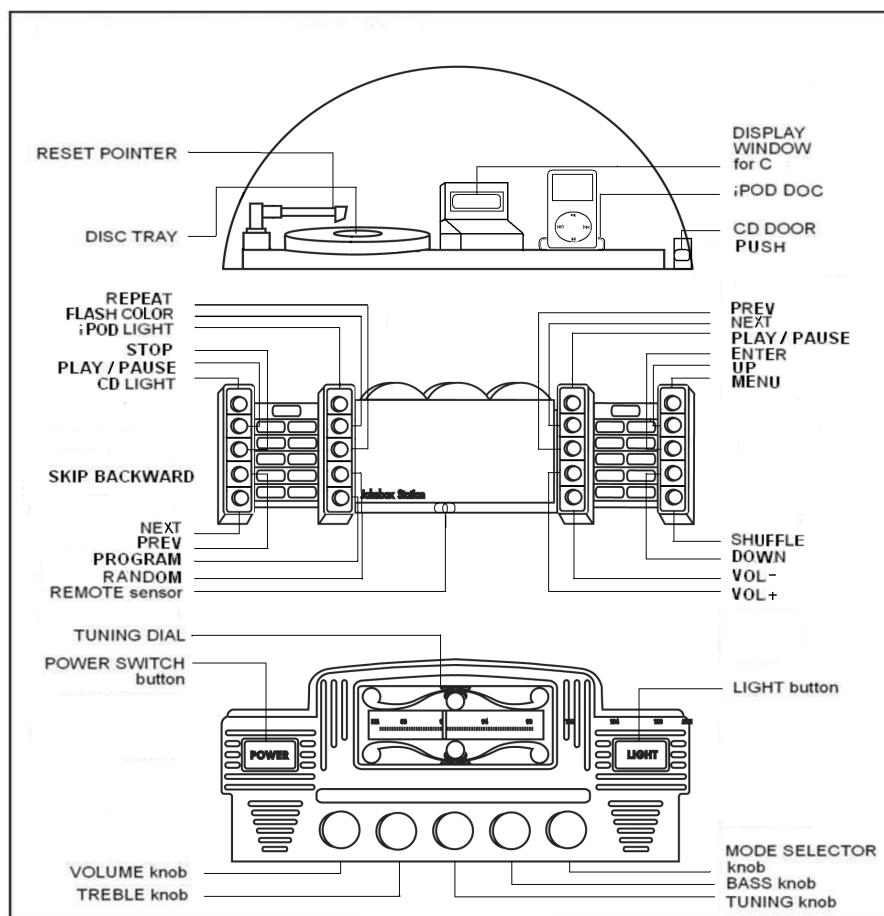

REMOTE CONTROL FUNCTIONS (FOR iPOD CD)


SAVE CD	○	iPOD SAVE
PLAY/PAUSE	▶	PLAY/PAUSE
STOP	■	STOP
SKIP FORWARD	▶▶	UP
SKIP BACKWARD	◀◀	DOWN
FAST FORWARD	▶▶	VOL +
BACK REWIND	◀◀	VOL -
		ENTER
		MENU

 FRONT PANEL FUNCTIONS + REMOTE CONTROL FUNCTIONS FOR MODEL MEMPHIS WITH USB/SD CARD:

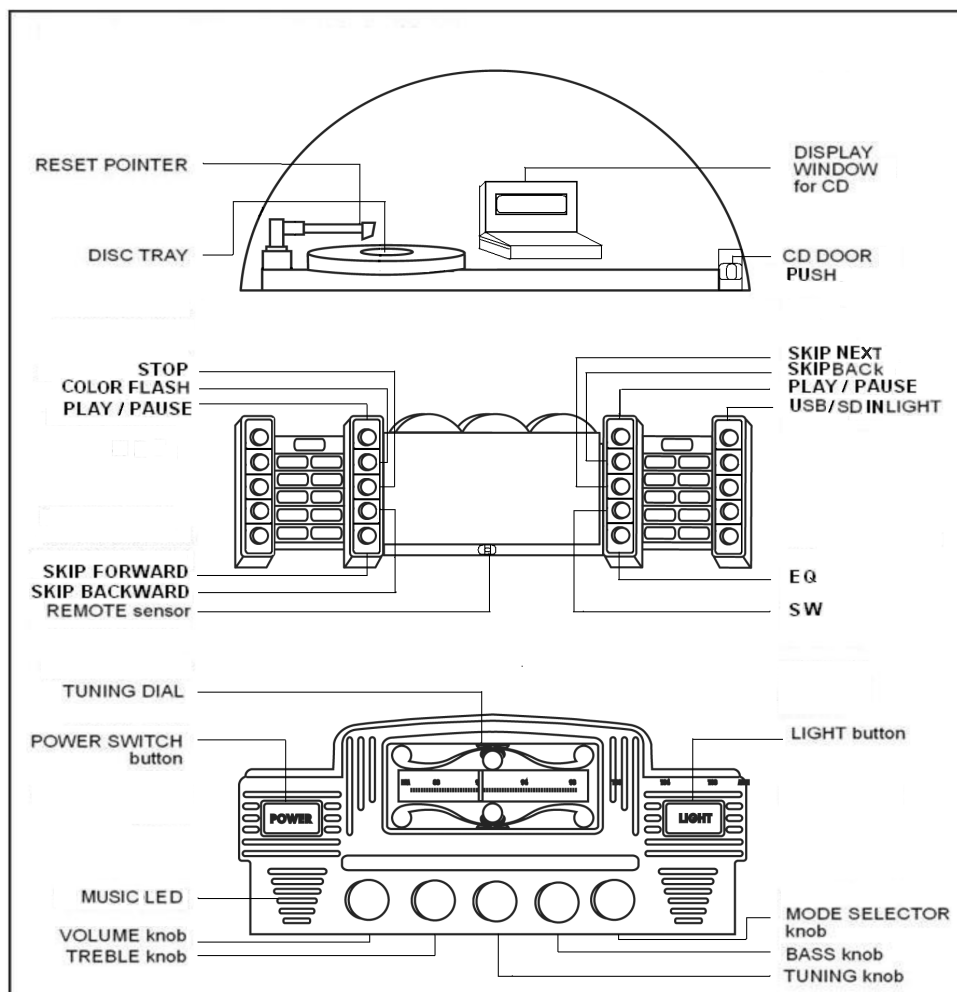


REMOTE CONTROL FUNCTIONS(FOR CD/SD/USB)

PLAY/PAUSE	▶▶	(CD)
STOP	■	
SKIP FORWARD	▶▶▶	(CD)
SKIP BACKWARD	◀◀◀	(CD)
PROGRAM	PRG	
FAST FORWARD	▶▶▶▶	(CD)
BACK REWIND	◀◀◀◀	(CD)
REPEAT	REP	

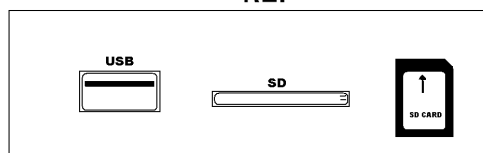 

 FRONT PANEL FUNCTIONS + REMOTE CONTROL FUNCTIONS FOR MODEL NEW ORLEANS WITH USB-SD CARD:

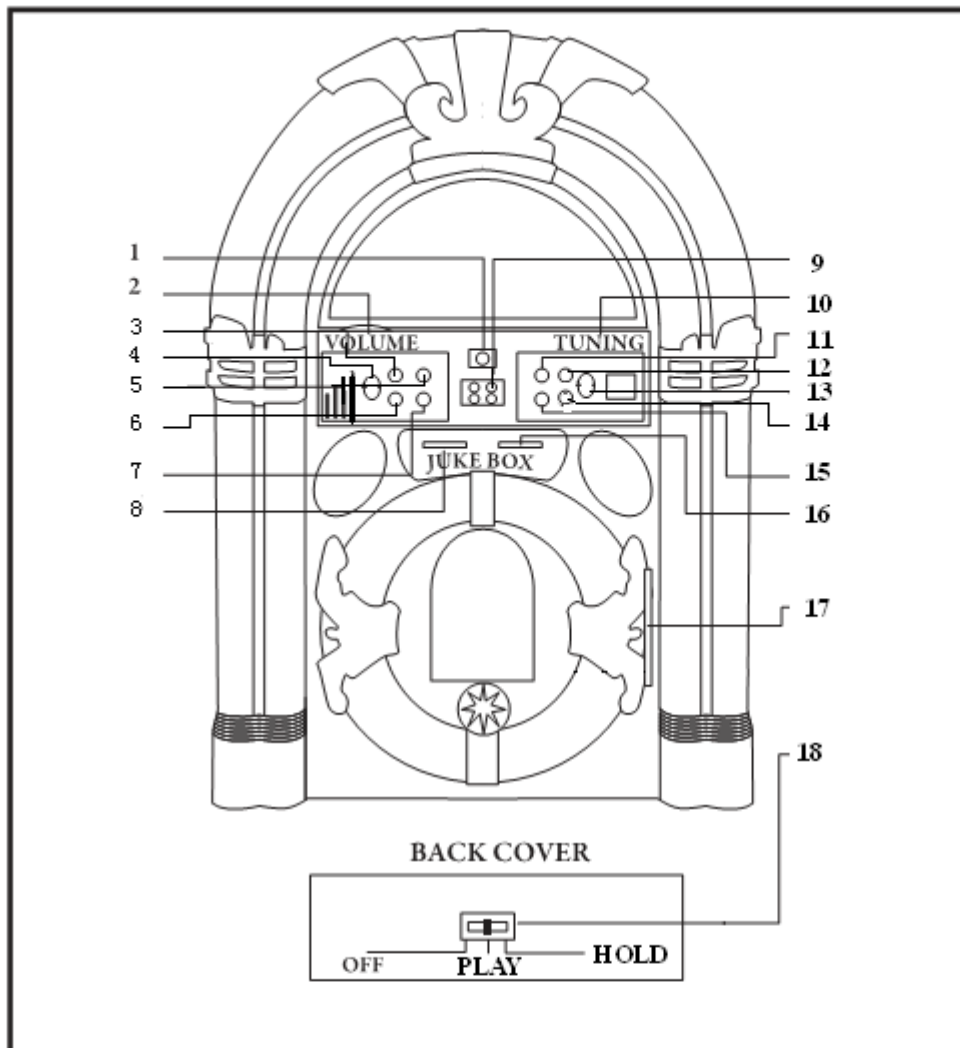

LOCATION OF CONTROL - MAIN UNIT

- | | |
|----------------------|--------------------------------|
| 1. REMOTE SENSOR | 10. TUNING KNOB |
| 2. VOLUME | 11. BACK |
| 3. STOP | 12. NEXT |
| 4. CD PLAY/PAUSE | 13. USB/SD PLAY/PAUSE |
| 5. REP. REPEAT ALL | 14. SW |
| 6. F.W SKIP BACKWARD | 15. EQ |
| 7. F.F. SKIP FORWARD | 16. CD. USB/SD. AM. FM. SELECT |
| 8. ON/OFF SWITCH | 17. CD/RESET |
| 9. DISPLAY LED | 18. BACK LIGHT SWITCH |

TO PLAY A CD

1. Press the ON/OFF switch and select MODE SELECTOR to CD.
2. Flip open the semi circle "CD DOOR"
3. Turn the "RESET" pointer to "OFF" position and insert a disc onto the disc tray.
**(Make sure the "RESET" pointer in "ON" position after disc loaded.)
4. Press the PLAY/PAUSE button to play the CD, press once again to temporarily stop disc play.
5. Press STOP to stop playing the CD.
6. Adjust listening level and sound effect with Volume knob and Loudness button.
7. Press SKIP FORWARD to skip ahead to next track. Press SKIP BACKWARD to skip back to previous track. The track number will be displayed in readout.

NOTE:

If the disc is seriously scratched, or too dirty, disc play may not start.

If an improperly centered disc is played, noise can be heard in the mechanism. The use of such discs should be avoided.

NOTES ON CD-R/RW DISCS

- **Because of non-standardized format definition/ production of CD-R/RW, playback quality and performance are not guaranteed.**
- **Manufacturer is not responsible for the playability of CD-R/RW due to recording conditions, such as PC performance, writing software, media ability, etc.**
- **Do not attach a seal or label to either side of the CD-R/RW disc. It may cause a malfunction.**

PROGRAMMED DISC PLAY

It is not possible to enter programs during disc play. Press the STOP button first, then enter a program.

1. Press the STOP button.
2. Press the PROGRAM button. Select a track number using SKIP FORWARD or SKIP BACKWARD button, press PROGRAM button again
3. Repeat step 2 until all the desired tracks are programmed in memory
- 4.

NOTE:

- To modify the program, press the STOP button and restart from step 2.
- To clear the program, press the STOP or power is switched off

REPEAT DISC PLAY

1. Press REPEAT button once to repeat disc play of one track.
2. Press REPEAT button twice to repeat all the track on the disc.
3. Select the desired track for disc play using SKIP FORWARD or SKIP BACKWARD button.
4. Press the PLAY/PAUSE button to play
5. Press STOP button to cancel repeat mode.
- 6.

RANDOM DISC PLAY

1. Press the RANDOM button to play CD in random order.
2. To cancel RANDOM, press STOP button

MUTE DISC PLAY

1. Press MUTE button to muting the sound while playing disc. *The MUTE indicator on the CD control panel will be lighted up.
2. To resume press MUTE again and the MUTE indicator will goes off

USING THE IP DOCK (for those models with Ipod connection)

1. Connect the Mains Lead and Plug to a suitable AC Mains wall outlet.
2. Open the iP dock drawer at the lower part of unit.
3. Insert your iPod into the iP Docking station before switching it on and ensure the iPod is firmly seated.
4. Set the MODE SELECTOR to IP. (The iP Dock indicator light should light up).
5. Rotate the VOLUME/POWER knob clockwise to turn on the unit.
6. Press the PLAY/PAUSE button (on both the remote handset or ipod) to start playing the music.
Note: Whilst in the dock, the internal battery of the iPod will be charged.
7. Press PLAY/PAUSE once again to pause the music.

8. Press (on both the remote handset or ipod) to enter the iPod menu.
9. (on both the remote handset or ipod) for selection
10. (on both the remote handset or ipod) to operate selection.
11. on the remote handset (iP only section) or rotate /POWER knob on the front panel adjust the Volume sound level.
12. Press STOP on the remote handset to stop playing.
13. To switch off the iPod, press and hold the PLAY/PAUSE button for a few seconds until the iPod display has turned dark. Note: The iPod will keep charging when docked until fully charged.
14. To play the music again, simply press the PLAY button.
15. To safely remove the iPod, first press and hold the PLAY/PAUSE button for few seconds until the iPod display has turned dark, then switch off the unit by the VOLUME/POWER knob.

***IMPORTANT NOTE:**

To avoid malfunction on both your iPod and the iP Dock, make sure your iPod, as well as the POWER of the Jukebox, is switched off before inserting your iPod into the iP Dock!

NOTE:

1. The main rotary VOLUME knobs on the front panel of the jukebox control the volume loudness of CD & iP Dock.
2. When using the remote control handset to adjust the volume of the iP Dock, the main Volume knob should be set at your maximum desired sound level.
3. When using the iP dock with your iPod, it is recommended to set the iPod Backlight Timer to "ALWAYS ON" for easy reference.

MUTE DISC PLAY

1. Press MUTE button to muting the sound while playing disc. *The MUTE indicator on the CD control panel will be lighted up.
2. To resume press MUTE again and the MUTE indicator will goes off

LIGHT OPERATION

1. LIGHT MODE (MEMPHIS model ONLY)

The colors of the lights change overtime gradually, press COLOR FLASH to remain static to your favourite color. Press it again to resume.

2. LIGHT MODE (KANSAS, NEW ORLEANS models only)

The colours of the lights are continually changing. Move the PLAY/HOLD switch to the "HOLD" position for the lights to remain static at your favourite colour.

Note: The colour changing system will not work while in AM (MW)/FM radio mode -- the LED lighting Will automatically change to the "BLUE" light only

IMPORTANT NOTES

The colour changing sequences of the lights are controlled by IC (Integrated Circuit).

- The lights may turn off when the light mode is in the HOLD position, this is normal and not a malfunction.
- Press the small RESET button to clear all light mode pre-sets and start again.
- When the colour changing sequences are not in the right order, press the RESET button or
- press the LIGHT button on the front panel to switch off all the lights for few seconds.

RADIO OPERATION

1. Uncoil the Wire Antenna and extend fully for better reception.
2. Set the MODE selector to your desired band.
3. Tune to the desired radio station by using the TUNING knob.
4. To turn the radio off, press the POWER button.

AUXILIARY CONNECTION AUX IN (IF EQUIPPED)

1. Connect your own device (i.e. MP3 Player or iPod) to the AUX IN connection located on the back of the cabinet, together with stereo plug and detachable rack (packed separately).

2. Adjust the ON / OFF switch next to the jack to the ON position.
3. Rotate the MODE SELECTOR on the front panel to CD-AUX.
4. Adjust the sound level with the VOLUME knob on the Jukebox or via the volume control of the external device.
5. When changing to another mode, the external device will continue playing without sound until the ON/OFF switch on the Jukebox is moved to OFF and the external device is switched off.

 
TROUBLESHOOTING GUIDE

Symptom	Possible Causes (and Remedies)
RADIO RECEPTION	
No radio	<p>The MODE selector has not been set to the correct position.</p> <p>Adjust the VOLUME knob.</p> <p>Rotate the TUNING knob to find a radio station.</p> <p>Switch the AUX IN jack to "OFF"</p>
CD PLAYER OPERATION	
Disc does not play	<p>Reload the disc with the label side up</p> <p>Clean the disc.</p>
Sound skips	<p>Change the installation location.</p> <p>Press the Reset button.</p>
Unit is not working.	Press the STOP button and then program the tracks.
GENERAL	
Programmed disc play will not function	<p>The AC power cord is not connected to an AC wall outlet.</p> <p>Check that the power cord is connected firmly.</p> <p>Push the power button from the "OFF" position to the "ON" position.</p>
No sound output.	<p>Turn VOLUME knob clockwise. Press the Reset button.</p> <p>Switch the AUX IN jack to "OFF" and remove the RCA cord.</p> <p>Switch the external speaker jack on the back cover.</p>
Severe hum or noise.	<p>The TV or VCR is too close to the stereo system.</p> <p>Separate from the TV or VCR.</p>

THE OPERATING INSTRUCTIONS REFLECT THE CURRENT TECHNICAL SPECIFICATION OF THIS PRODUCT AT TIME OF PRINT.
 WE RESERVE THE RIGHT TO CHANGE SPECIFICATIONS FOR TECHNICAL REASONS WITHOUT PRIOR NOTICE.

IMPORTANT SAFETY INSTRUCTIONS

1. Read Instructions – All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and user instructions should be followed.
5. Cleaning – Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture – Do not use the product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in wet basement; or near a swimming pool; and the like.
8. Accessories – Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care; quick stops, excessive force and uneven surface may cause the product and cart combination to overturn.
10. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11. Power Sources – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
12. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature; if you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. (FOR USA OR CANADA ONLY)
13. Power-Cord Protection – Power-supply cord should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cord at plugs, convenience receptacles and the point where they exit from the product.
14. Protective Attachment Plug – The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting or protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
15. Outdoor Antenna Grounding – If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article S10 of National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See Figure 131.1.
16. Lightning – For added protection for this product during a lightning storm or when it is left unattended and unused for long period of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
17. Power Lines – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
18. Overloading – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
19. Object and liquid Entry – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. Servicing – Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

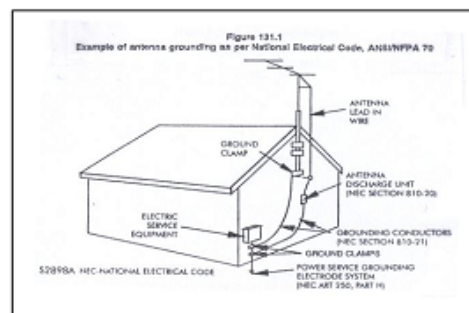

21. Damage Requiring Service – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged.
 - b) If liquid has been spilled or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance – this indicates a need for service.
22. Replacement Parts – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. Safety Check – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
24. Wall or Ceiling Mounting – The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. Heat – The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.



IMPORTED BY NORDITALIA RICAMBI SRL.
VIA SPAINO 2, 22066 MARIANO COMENSE (CO), ITALY